

# TecWrapz™


## APPLICATION INSTRUCTIONS

### Surface Preparation


The surface of your laptop must be cleaned before applying your vinyl graphics. Denatured (rubbing) alcohol and a lint free cloth can be used to clean the surface and remove any dirt and fingerprints.

### Application

**NOTE: Prior to application, be sure your wrap is oriented properly when your laptop is open.** Trim the wrap on all sides so only a very thin edge of the liner is showing. This will make it easier to properly center and line up the wrap with the edge of the laptop. Place wrap in desired position using masking tape at corners to secure. Place a long strip of masking tape vertically across the center of the wrap extending above and below to secure the wrap to the laptop cover. This tape will also act as a hinge.

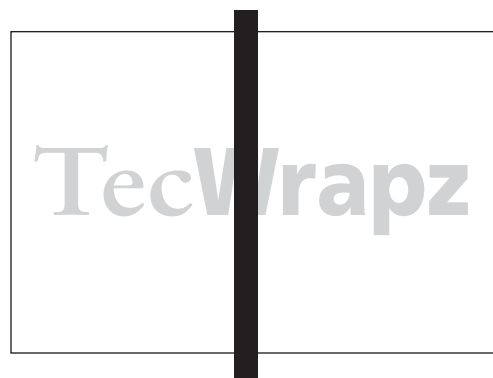


Start on either side and carefully peel back the wrap toward the center hinge, separating the wrap from the backing. Remove the backing close to the hinge by making a clean cut with scissors or a single edge blade. Use care to avoid folding or allowing the wrap to touch the application surface when removing the backing.

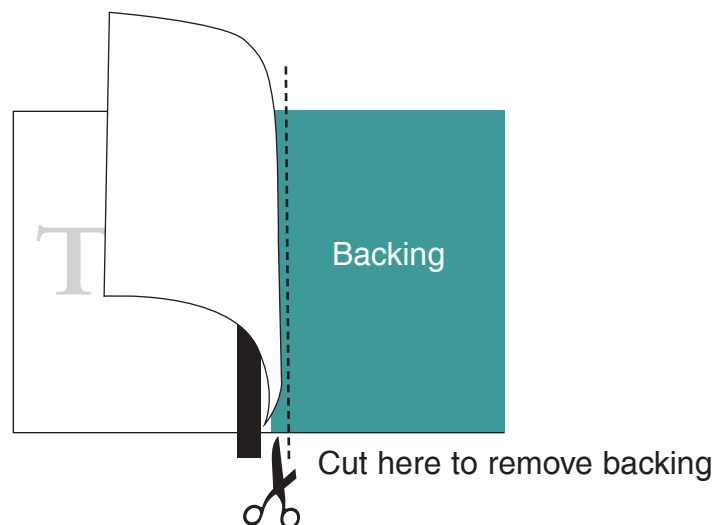

Swing the wrap back to the original position **but do not let adhesive side touch the surface prior to beginning the squeegee application.** Starting at the center hinge, squeegee onto the application surface using short strokes at a 45 degree angle; first to top then to bottom using overlapping strokes. Apply slowly with firm pressure to avoid trapping air bubbles under the vinyl. A credit card works well as a squeegee.

Next, remove the center making tape hinge, swing the remaining half to the opposite side and remove the backing and apply with squeegee as before.

### Squeegee Directions

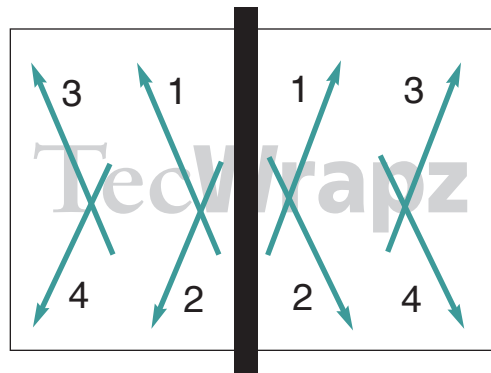

If you need to trim the decal to fit around hinges, etc., carefully use a sharp hobby (X-acto) knife and remove the excess vinyl.

### Special Notes

Air bubbles may appear during application. These can be removed by pricking with a pin and pressing the air out. Most small bubbles, however, will dissipate over time.

If you need to store your wrap prior to application, place in a cool, dry place and lay flat.